


# Kederflex

## Installation guidelines

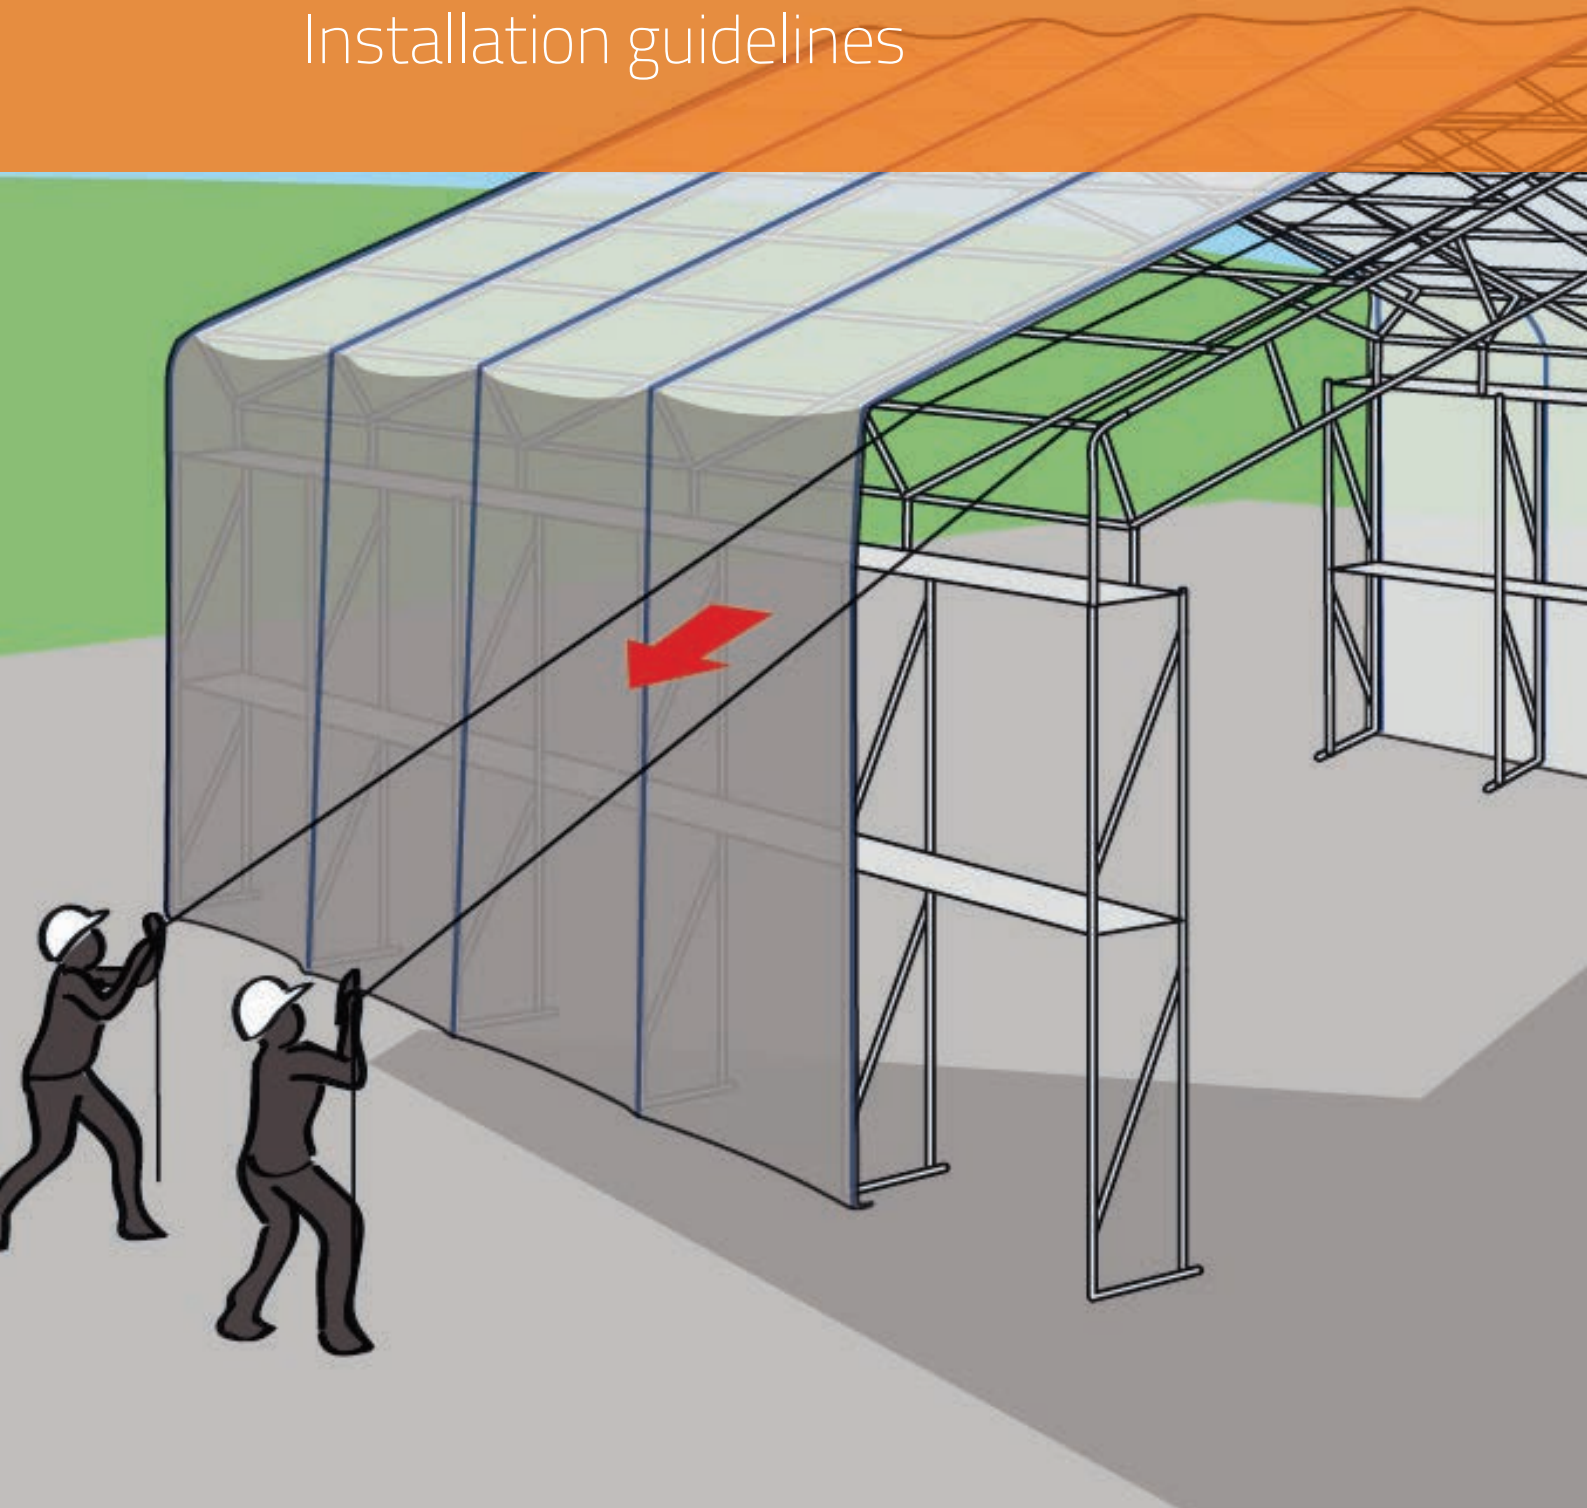

- Unpack and unfold the Kederflex bundle.
- Insert the pulling rod into the backfolding opening.
- Pull out the Kederflex sheeting via the pulling rod into the guide rail of the scaffold system.
- Fix the sheeting ends on the scaffold (if necessary fix by the Monarflex eyelets for noise reduction and free passage for the water).
- Mounting and dismantling of Kederflex must only be conducted by professionals and trained workers.

- When working with Kederflex - always follow national Health and Safety rules and do not work in rough weather. If in doubt contact your supervisor.
- It is the installers responsibility to make the final control before mounting and ensure the product is free of any errors.
- For safety reasons it is not recommended to walk on top of the Kederflex when it is mounted.
- Snow must be removed from the sheets.

